



**Glen Products Inc.**

1711 Newport Circle  
Santa Ana, CA 92705

®

Toll Free: 1-800-486-4455

Fax: 1-714-850-9172

www.glenproducts.com

## Installation instructions for TL-200 table legs for a 60" round table

### Package Contents:

	Count	Description
	26	Screws
<b>A</b>	1	"Straight Bar" leg
<b>B</b>	1	"Spacer Bracket" leg
<b>C</b>	2	"U" clips (for attaching straight bar leg)

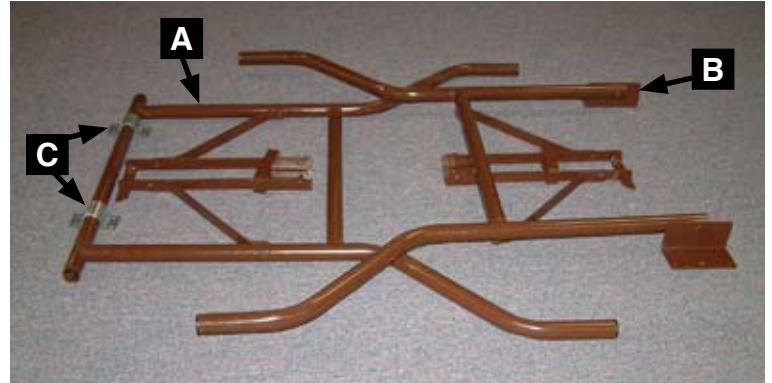


Figure 1

### Installation instructions for TL-200 table legs:

1. Open package and separate contents
  - a. Verify that all items are included. If not, please contact us at 1-800-486-4455.
  - b. Notice that there are two legs, each different. This is to allow for the one leg (with built-in spacer bracket) to ride OVER the other leg once folded.
2. Unfold the elbows and place upside down on the bottom of the table top (see Figure 2). Do this by holding on to the elbow mounting clip while pulling on the elbow joint.
  - a. Make sure that the elbow stop plate is **FACING THE TABLE** and completely opened (see Figure 3). If the stop plate is facing you, flip it around until facing down as in the picture. The elbow stop plate is the flat tab welded onto the elbow that keeps the elbow from continuing on past the open position.
3. Mount the flat bar leg to the table using the 2 included "U" clips. Level the leg to 90 degrees from the table so that the leg opens to a straight position.
4. Mount the elbow bracket by attaching with the included screws.
5. Repeat steps 3 and 4 above to mount the second table leg (with spacer brackets).
6. Check for proper functioning by folding both legs (see Figure 1). Then turn table over and **SETUP TABLE** as you normally would, making sure that the elbow lock slides into place over the elbow joint (see Figure 3). Do not use the table if the legs do not operate properly and lock in the open position at a straight 90 degree angle to the floor.

Figure 2



Figure 3

